



kitchen ware

廚房用品系列

Use and Features 使用方法及特點:



Place washed vegetable in basket, put on cover and pull cord to spin dry. The vegetable can also be washed directly in the spinner. Fill translucent container with water, place vegetable inside to wash and then spin dry as per above instructions.
將洗淨之蔬菜放進脫水器之籃內，放好蓋，拉動繩扣數次便可，也可以將清水注入透明器皿內，把未洗之蔬菜放入籃內拉動繩扣，直接清潔，方便快捷。

The translucent container can be used as a mixing or serving bowl.
脫水器內之透明器皿，可用作盛載沙律蔬果或調味之用。




The basket can be used as a colander for hot pasta and others.
脫水器內之籃，可用作過冷河或隔水之用。

Defrosting meat in the spinner can prevent moisture forming on the meat.
脫水器可處理冷雞或凍肉食物，避免雪霜之形成及食物浸在溶雪中。



888 Salad spinner 蔬菜脫水器

D.260 x H.172mm
D.10-1/4" x H.6-3/4"
6.2L / 1.36 gal
I 12 pcs / 1.967 (0.055)
II 12 pcs / 5.951 (0.167)
III 6,396 pcs / 2,112 pcs
IV 12,792 pcs / 4,224 pcs

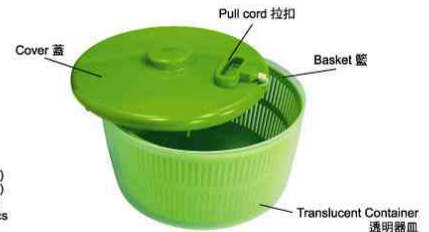

1496 Kitchen utensil holder 筷子筒

D.103 x H.335mm
D.4-1/8" x H.13-1/4"
I 12 pcs / 1.930 (0.054)
II 24 pcs / 4.248 (0.119)
III 6,516 pcs / 5,928 pcs
IV 13,032 pcs / 11,856 pcs

1497 Kitchen utensil holder 餐具筒

D.115 x H.300mm
D.4-1/8" x H.11-3/4"
I 12 pcs / 1.761 (0.049)
II 24 pcs / 3.831 (0.107)
III 7,152 pcs / 6,576 pcs
IV 14,304 pcs / 13,152 pcs

1495 Kitchen utensil holder 廚具座

D.115 x H.295mm
D.4-1/2" x H.11-5/8"
I 12 pcs / 1.280 (0.036)
II 24 pcs / 2.848 (0.080)
III 9,840 pcs / 8,832 pcs
IV 19,680 pcs / 17,664 pcs



Press knob to stabilize the paper roll.
只要在頂上輕輕按下，紙卷即不會轉動。



● Suitable for roll size 105-275mm.
適合紙卷尺碼高度由105-275毫米。



450 Paper towel dispenser 抹手紙座

D.152 x H.105mm
D.5-15/16" x H.4-1/8"
I 24 pcs / 2.075 (0.058)
II 48 pcs / 4.548 (0.127)
III 12,144 pcs / 11,040 pcs
IV 24,288 pcs / 22,080 pcs



862 Utility container 多用途容器

275 X 170 x H.108mm
10-3/4" X 6-5/8" x H.4-1/4"
I 12 pcs / 2.882 (0.081)
II 12 pcs / 3.136 (0.088)
III 4,368 pcs / 4,008 pcs
IV 8,736 pcs / 8,016 pcs



Suitable for holding detergents or sponges. Drainage tray underneath keeps counter clean and dry.
適用擺放洗潔精及百潔綿之類的清潔用品，其底部的有孔托盤可防止積水，令廚櫃面層時刻保持清潔乾爽。